


1971-74 STARTING MOTOR COMPONENTS PARTS
MINOR PARTS

KEY	DESCRIPTION	ASSEMBLIES					
		1108365	1108366	1108446	1108495	1108498	1108500
23	LOCKWASHER, Brush Holder Support Screw	453435	*	*	*	*	*
24	LOCKWASHER, Field Lead Screw-To Switch	—	—	—	—	—	—
25	LOCKWASHER, Field Lead Screw-To Ground	—	—	—	—	—	—
26	LOCKWASHER, Shift Lever Stud	—	—	—	—	—	—
27	LOCKWASHER, Switch Attach. Screw	9421423	*	*	*	*	—
28	NUT, Support Screw-Pkg. of 100	5721822	*	*	*	*	—
29	NUT, Shift Lever Stud	1926640	—	—	—	—	—
30	SCREW, Brush	448015	*	*	*	*	*
31	SCREW, Support	274738	*	*	*	*	*
32	SCREW, Field Lead	9427815	*	*	*	*	*
33	SCREW	—	—	—	—	—	—
34	SCREW, Pole Shoe	1970469	*	*	*	*	*
35	SCREW, Switch Attach.	132255	*	—	—	—	—
36	WASHER, Brake-C.E.	818265	*	*	*	*	*
37	BOLT, Thru-With Extension	—	—	1941111	1941111	1941111	1941111
	BOLT, Thru-Less Extension	1941070	1939970	1939970	1939970	1939970	1939970
39	BUSHING, D.E.	1923907	*	1932190	1932190	1932190	1932190
40	GROMMET (In Field Frame)	1966391	*	1965047	1846097	*	1946097
41	INSULATOR, Field Coil	1927853	*	—	—	—	—
42	PIN, Support	1966923	*	1938058	1938058	1938058	1938058
43	PIN, Dowel-D.E.	817313	*	*	*	*	*
44	SHOE, Pole	1931129	*	*	*	*	810601
	RING, Shaft Lever Retaining	274676	*	*	*	*	*

SOLENOID SWITCH PARTS	1114356	1114378	1114379
STUD, Term (3/8-16) - Motor	1950120	1949890	—
STUD, Term (8-32) - Switch	822205	*	1950069
CLIP, Term	1937381	*	*
COVER	1963525	—	6258043
GASKET, Cover	1966034	—	—
WASHER, Cover Screw	1923935	—	—
SCREW, Cover	453468	—	453468
STUD, Term (8-32) - Resistor	822205	*	1935644
CONTACT, Term (8-32)	1935645	*	*
CONTACT & PUSH ROD	1956226	*	*
WASHER, Term Stud (3/8-16) Rubber	1950064	—	—
WASHER, Term Stud (3/8-16) Plain	3765135	*	—
WASHER, Term Stud (8-32) Rubber	1950071	—	—
WASHER, Term Stud (8-32) Plain	1914476	—	—
NUT, Term Stud (3/8-16)	1904419	*	—
SPRING, Contact Return	1853342	*	*
SCREW, Field Lead To Term (10-32)	9427815	—	—
SPRING, Plunger Return	1956679	—	—