


1967-70 STARTING MOTOR COMPONENT PARTS

(FOR STARTING MOTOR ASSY. APPLICATION REFER TO STARTING MOTOR CHART PAGE 1)

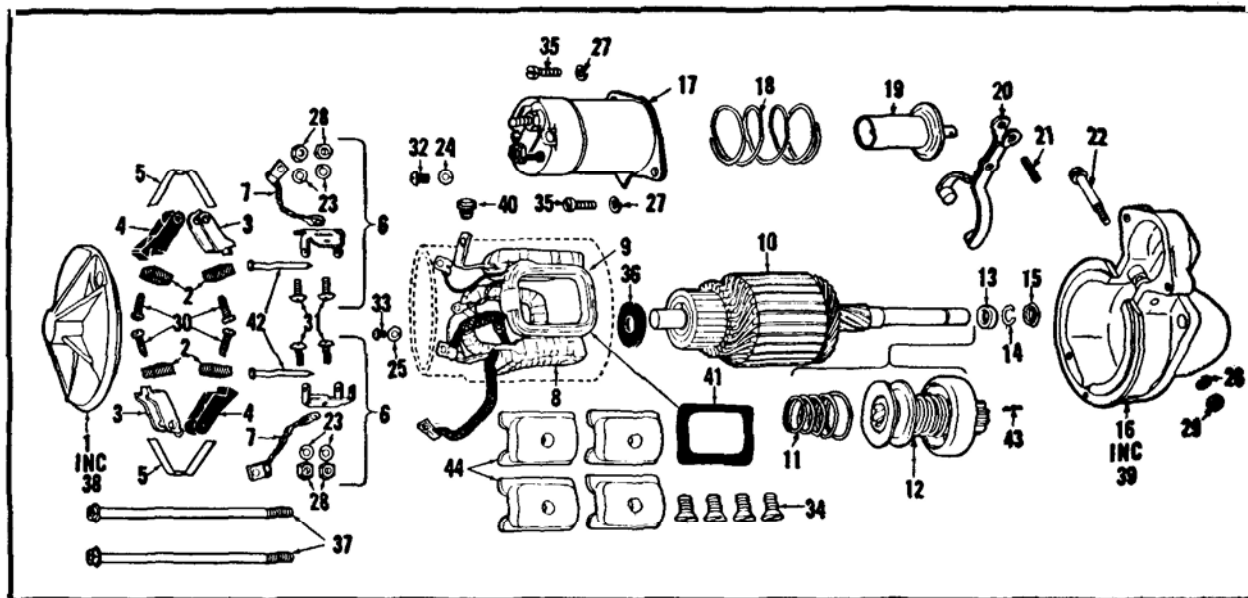

MAJOR PARTS

Starting Motor Assembly Number	Frame C.E.	Brush	Holder Ground	Holder Insul.	Spring Brush	Support Package	Lead Ground	Coil	Coil Shunt	Armature	Spring Assist
1108498	1928966	1906945	1940477	1926618	1926622	1928015	1960864	1935128	1935131	1955937	—
1108328	"	"	"	"	"	"	"	"	"	"	—
1108329	"	"	"	"	"	"	"	1967968	—	1966228	—
1108335	"	"	"	"	"	"	"	1965730	—	1940624	—
1108434	"	"	"	"	"	"	"	1935128	1935131	1971568	—
1108435	"	"	"	"	"	"	"	1965730	—	1970548	—
1108436	"	"	"	"	"	"	"	"	—	"	—
1108439	"	"	"	"	"	"	"	1967968	—	1971568	—

Starting Motor Assembly Number	Drive Assembly	Collar Stop	Ring Retaining	Collar Thrust	Housing Drive	Switch	Spring Plunger	Plunger	Lever Shift	Pin Lever	Stud Lever
1108498	1954842	1927849	1927848	1927850	1969156	1114356	1958679	1941113	1951567	456652	1945804
1108328	"	"	"	"	"	"	"	"	"	"	"
1108329	"	"	"	"	1965554	"	"	"	"	"	"
1108335	"	"	"	"	1969156	"	"	"	"	"	"
1108434	"	"	"	"	801227	"	"	"	801433	"	"
1108435	"	"	"	"	"	"	"	"	"	"	"
1108436	"	"	"	"	"	1114348	"	"	"	"	"
1108439	"	"	"	"	1968122	"	"	"	1951567	"	"